



# 2014+ Chevrolet Corvette

## Power Outlet Tray Fold-Up Switch Panel

Part # 00-11036

### INSTALLATION INSTRUCTIONS

These installation instructions will guide you through the steps necessary to install this switch panel in your 2014+ Chevrolet Corvette. This switch panel is designed to mount in the factory power outlet in the center console.

#### Tools Needed For Installation:

- T-15 Torx Bit
- T-20 Torx Bit
- Trim Tool


#### Step 1:

Using the trim tool, remove the plastic and leather trim from the console and under the dash on the drivers side. Then, using the T-15 Torx bit remove the 3 bolts that secure the center console.



#### Step 2:

Put your ignition in accessory mode, and place the shifter in the neutral position. Using the trim tool, pop the center console up. Once the console is loose, disconnect the 3 wiring connectors inside it.

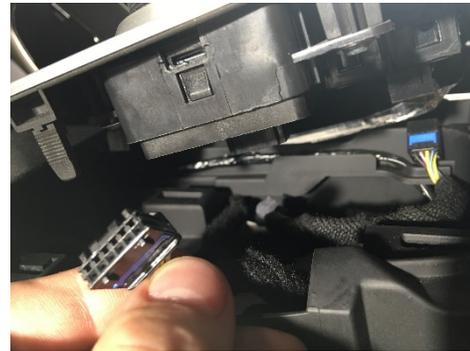

#### Step 3:

After disconnecting the wiring, firmly grip the shifter and pull up with slight force. The center console should then come loose, allowing it to be removed from the vehicle. Place the vehicle back park and turn the ignition off.



#### Step 4:

Take the console to a clean work area. On the bottom of the console, you will need to remove the six T-20 bolts that secure the 12V Power Assembly. Then, remove the 2 T-20 bolts that are on each side of the power assembly. At this point, the power assembly should come free.



# 2014+ Chevrolet Corvette

## Power Outlet Tray Fold-Up Switch Panel

Part # 00-11036

### INSTALLATION INSTRUCTIONS

#### Step 5:

Once the power assembly is removed from the console, use the two clips on the rear of the socket to remove the power socket. Now that the power socket is removed, take all switches except for the 'Arm' switch out of the switch panel. Then, place the double sided tape on the back of the switch panel. The double sided tape needs to go on both the top and bottom of the panel. Next, install the switches back into the panel and make sure they are properly secured with their mounting nuts.



#### Step 6:

Next, use the wiring diagram on the last page of these instructions to wire in your switch panel. Be sure all of your connections between the wires on your switches and the wires for your nitrous system are good, solid connections.



#### Step 7:

After your switch panel has been properly wired, you can begin reassembly. Be careful not to damage the trim fasteners when replacing the console.





# 2014+ Chevrolet Corvette

## Power Outlet Tray Fold-Up Switch Panel

Part # 00-11036

### INSTALLATION INSTRUCTIONS

#### Tips From The Pro's

When wiring your switch panel, double check all of your wiring connections. For a clean, professional install we recommend using heat shrink of all crimped connectors. This will protect the connection, and make the connection stronger between the wire and crimp-on connector.

If you have any questions regarding the installation or operation of your Nitrous Outlet Switch Panel, please call the Nitrous Outlet Tech Support Line at (254) 848-4300 or (866) 648-7637. We are available to answer your questions or concerns Monday-Friday, 8:30am-5:30pm CST.

#### Switch Panel Wiring Diagram

